

SWC Button Re-assignment Procedure

Please read each of the following steps to familiarize yourself with the process before beginning. The buttons must be programmed in the specific order shown in the chart below.

1. Turn the key to the ignition position. The LED will illuminate red.
2. Press and hold the programming button on the side of the interface until the LED illuminates green and you hear ascending chimes. Release the programming button.
3. Within 7 seconds, press the button that is to be learned on the steering wheel. The LED will turn red when the steering wheel button is pressed. **At this point you have two options:**
 - a. **For short press functionality:** Release the button on the steering wheel. A single chime will be heard and the LED will change back to green.
 - b. **For long press functionality:** Continue to hold the button until the LED flashes between red and amber and a long chime is heard. Release the button and the LED will change back to green.
4. Repeat step 3 for each additional button on the steering wheel.
5. If you come across a function in the chart that your steering wheel does not have, or you do not want to program, press and release the program button on the side of the interface to skip that function. The LED will go off and you will hear two chimes when it is done successfully.
6. Once programming is completed, wait seven seconds. The LED will flash green 3 times and you will hear descending chimes indicating the end of programming.
7. Test the interface for proper functionality. Whenever a SWC button is pressed the LED on the interface should blink green. If any function does not work, repeat the programming steps.

The SWC can always be restored to default settings by pressing and releasing the program button on the side of the interface once and waiting 7 seconds for the descending chime and the LED to flash 4 times.

Button Programming Order

	Alpine	JVC	Kenwood	Clarion	Other *	Pioneer	Sony	Fusion
1	Volume +	Volume +	Volume +	Volume +	Volume +	Volume +	Volume +	Volume +
2	Volume -	Volume -	Volume -	Volume -	Volume -	Volume -	Volume -	Volume -
3	Mute	Mute	Mute	Mute	Mute	Mute	Mute	Mute
4	Preset +	Source	Source	Source	Preset +	Preset +	Preset +	Source
5	Preset -	Track +	Play	Search +	Preset -	Preset -	Preset -	Track +
6	Source	Track -	Track +	Search -	Source	Source	Source / End Call	Track -
7	Track +	Band / Disc +	Track -	Band	Track +	Track +	Track +	Audio
8	Track -	Preset / Disc -	Disc / FM +	Send / End	Track -	Track -	Track -	Power
9	Power	Select	Disc / AM -	Send	Band	Band	Band	
10	Enter / Play	Attenuation	Answer	End	Answer **	Phone Menu	Power / End Call	
11	Band / Program	Phone Receive	Voice Dial	VR	End **	Answer Call	Voice Dial / Answer / End Call	
12	Receive	Phone Reject	On Hook		PTT **	End Call	VR (Android Auto & Car Play) Answer / End Call***	
13	End	Voice Dial	Off Hook			VR		
14	VR	Power	Mute					
15			Preset +					

* Advent, Boyo, Dual, Lightning Audio, Jensen, Rockford Fosgate & Visteon ** Jensen & Advent ONLY *** XAV-AX100 Only