


● Panel Controls

1. Return
2. Next/Scroll Down
3. Last/Scroll Up
4. Menu
5. USB-A
6. Screen Display
7. Volume/Play/Pause/Confirm/Select Master Knob

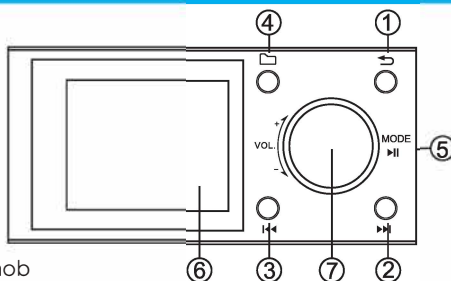

● Operation

Products may have different functions due to software update. Please refer to the latest actual products.

Long press the master knob to enter into Setting page.

- DSP Settings Selection → 6 Settings Modes
- Source Selection → CD
- Bass Level Adjustment
 - Bluetooth
 - OPT
 - USB Disk
 - AUX



Note: Regarding to audio source selection, if there is no signal for the source selected, the DRC will automatically switch to the next audio source.

● Short press the master knob to play and pause music.

Rotate the master knob to adjust volume, or scroll up & down the list.

- 📁 SHORT PRESS: Enter the folder (playlist); If in the playlist, short press to return the playback screen
- ⏮ SHORT PRESS: Track Backwards (Scroll Up)
- ⏭ SHORT PRESS: Track Forwards (Scroll Down)
- ↶ SHORT PRESS: Return

● SUGGESTIONS

- For better operation experience, high quality USB 2.0 drivers are highly suggested.
- It is recommended to format the USB flash driver before saving song files. Please save the song files in FAT32 and EXFAT formats. Do not save other unsupported files on the USB flash driver, such as .EXE and image files.
- It is highly suggested that the total number of saved folders should be less than 150pcs, and the total songs in each folder should be no more than 50pcs.

* Only USB flash driver's music source can be fully controlled, such as Volume, Track, Play & Pause.

* Other music sources can be controlled with volume only, such as Bluetooth, CD, Auxiliary and Optical.