



MAX A1

A1-550.1D24 / A1-1000.1D24

HARDCORE CAR AUDIO

WE PLAY LOUD!!

We know what you want. You want it LOUD, and that's exactly what we do, what we live for. Vibrations, gut-punches and straight up loud music - that's what makes us tick. We won't dress up in fancy words or claim to be something we're not. We are the NO BULLSH!T car audio brand!

Every single product with the GAS logo on it is born out of passion, the same that has driven us for two generations and that will keep us rolling up to your neighbourhood, winning and pushing the limits for many generations to come!

It's up to you to choose your own level of loud, and if you don't like what we do that's OK. You are welcome back when you've had your first true GAS experience. We don't exclude, we don't judge and we do not make up any excuses for who we are.

We are GAS and we are proud to be LOUD!

GAS

TABLE OF CONTENT

	SAFETY.....	3
	UNPACKING.....	4
	DIMENSIONS.....	4
	SPECIFICATIONS.....	5
	MAX A1-550.1D24.....	5
	MAX A1-1000.1D24.....	5
	Recommended cable sizes.....	6
	FEATURES.....	7
	Welcome to MAX.....	7
	Power that fits the build.....	7
	Keep it neat.....	7
	In charge.....	7
	Built for abuse.....	7
	FUNCTIONS.....	8
	Power / Protect / Clip indicators.....	8
	Input / Level (Gain) / Bass EQ.....	9
	Crossover / HPF / LPF / Speaker outputs.....	10
	Power / Remote / Ground.....	11
	HOW TO.....	12
	Install amplifier.....	12
	Connect speakers.....	17
	Tweaking & settings.....	19
	TROUBLESHOOTING.....	26
	No power.....	26
	No sound.....	26
	Unwanted noise.....	26
	Distortion.....	26
	Protection.....	26
	WARRANTY & DISPOSAL.....	27
	EXPLORE.....	28
	THE GAS WORLD.....	29



SAFETY

NO COMPROMISES! Especially when it comes to safety. Before installing your MAX A1 series amplifier, make sure that you read through the manual thoroughly and follow the instructions. Save the manual for future usage and reference!

Make sure to pay attention to the instructions when you see this symbol: 

Make sure that your vehicle has a 24 VDC voltage negative ground system, that it can handle an increased power consumption, and that both the alternator and the power source are healthy and up to the task.

Don't install the amplifier inside the engine compartment or any other surface that may be compromised by water or dirt. Your amplifier will produce heat so make sure it'll have sufficient air circulation (4-5cm open space on all sides).

Keep the cables inside the vehicle separate from sharp edges or components that may be affected or take damage. Follow the recommended cable sizes and always use high quality cables and accessories. Even if you are eager to put the amplifier to use – take no shortcuts when installing the cables, make sure that all connectors are protected and secured, and take your time finding the perfect grounding point.

Don't drill any holes without checking what lies beneath, and don't cut anything without making sure that no important components risk being damaged.

There's a first time for everything, if you need help – ask a friend or contact your local GAS AUDIO POWER dealer/installer.

We want you to experience your products to the MAX, but we don't want you to injure yourself or others. Use common sense, respect high pressure levels and volume, and follow your local laws and regulations.

UNPACKING

 
We know you're excited to dive head first into installing your new amplifier, but before you do: Make sure that the amplifier and all the accessories are included in the packaging.




Amplifier
(1 pc)



Manual
(1 pc)



Allen keys
(2 pcs)

 

Fuses
(2 or 3 pcs)



 
Screws
(6 pcs)



Remote
(1 pc)



Remote cable
(1 pc)



4-PIN cable
(1 pc)

 
 


M4 washer
(4 pcs)



M4 washer
(4 pcs)

DIMENSIONS



	A	B	C	D	E	
A1-550.1D24	230	206	115	98	46	mm
A1-1000.1D24	340	316	115	98	46	mm

SPECIFICATIONS

We take pride in our work! True, honest specifications and power ratings are an important part of all amplifiers. Listening, measuring and engineering are essential parts in our workshop. That's how we make sure to bring you an awesome product with NO BULLSH!T.

MAX A1-550.1D24

Component	Amplifier
Topology	Class D
Channels	1 channel
Power RMS (1 Ohm)*	N/A
Power RMS (2 Ohm)*	1x550W
Power RMS (4 Ohm)*	1x330W
Frequency Response	10-150Hz
Low Pass Filter	50-150Hz
Subsonic Filter	10-50Hz
S/N Ratio (A-weighted)	>98dB
Bass EQ	0-12 dB @ 45Hz
Crossover Slope	12/24dB
Power Voltage	20-32V
REM voltage	20-32V
Input Sensitivity	0.2-6V
Input Impedance	20K Ohm
T.H.D	<0.1%
Variable Phase Shift	0-180°
Power Fuse	2x15A
Damping Factor	>130
Start/Stop	Yes
Bass Remote	Yes / Level

*CEA-2006 Power Standard,
28.8V @1% THD

MAX A1-1000.1D24

Component	Amplifier
Topology	Class D
Channels	1 channel
Power RMS (1 Ohm)*	1x1000W
Power RMS (2 Ohm)*	1x750W
Power RMS (4 Ohm)*	1x400W
Frequency Response	10-150Hz
Low Pass Filter	50-150Hz
Subsonic Filter	10-50Hz
S/N Ratio (A-weighted)	>98dB
Bass EQ	0-12 dB @ 45Hz
Crossover Slope	12/24dB
Power Voltage	20-32V
REM voltage	20-32V
Input Sensitivity	0.2-6V
Input Impedance	20K Ohm
T.H.D	<0.1%
Variable Phase Shift	0-180°
Power Fuse	2x30A
Damping Factor	>130
Start/Stop	Yes
Bass Remote	Yes / Level

*CEA-2006 Power Standard,
28.8V @1% THD

SPECIFICATIONS

RECOMMENDED CABLE SIZES		
MAX A1-550.1D24	RECOMMENDED MINIMUM SIZE	MAX SIZE
Power cable	4AWG (20mm ²)	2AWG (35mm ²)
Speaker cable	16AWG (1.5mm ²)	10AWG (6mm ²)
REM cable	18AWG (0.75mm ²)	10AWG (6mm ²)
MAX A1-1000.1D24	RECOMMENDED MINIMUM SIZE	MAX SIZE
Power cable	2AWG (35mm ²)	2AWG (35mm ²)
Speaker cable	14AWG (2.5mm ²)	10AWG (6mm ²)
REM cable	18AWG (0.75mm ²)	10AWG (6mm ²)

FEATURES

If you have this in your hand, you have finally made it. You are ready to take the next step, to enter a world of NO COMPROMISES with an amplifier that will take your car to a whole new level. So get out there and impress the non-believers! Show them that true dedication comes from the inside of your trunk and that “good enough” just doesn’t cut it.

WELCOME TO MAX

If you’re here, you’re not chasing average. You want power, control, and an amplifier that doesn’t fold the second the system starts demanding more. MAX A1 is built for exactly that. It takes the proven amplifier DNA from MAX A2 and PA1 and packs it into a tighter format. Less space wasted, but just as spicy.

POWER THAT FITS THE BUILD

MAX A1 24V is built around a high-efficiency push-pull power supply and an integrated Class D amplifier module from Infineon, all mounted on a double-sided PCB. The platform is familiar for a reason. It works. The design philosophy behind MAX A2 and PA1 lives on here, refined into a more compact chassis. Small footprint doesn’t mean small ambitions.

KEEP IT NEAT

Power is useless if the signal falls apart. MAX A1 uses balanced input circuitry with high noise rejection to keep things clean, stable, and in full control. The updated high-level input also makes MAX A1 ready for modern 24V vehicles. So when the vehicle tries to interrupt the fun, your system doesn’t lose its nerve.

IN CHARGE

MAX A1 24V gives you the control to make the system play the way it should, not the way the amplifier forces it to. The mono models feature selectable 12 or 24 dB crossovers, low-pass filtering, and subsonic control for tighter bass. More precision. More purpose. More power where you need it.

BUILT FOR ABUSE


A great amplifier needs to take abuse now and then. MAX A1 24V is loaded with protection circuits for soft start and shutdown, voltage drops, voltage spikes, overheating, overload, and short circuits. It keeps its head when things get messy. When you go MAX, you don’t do half measures.

FUNCTIONS

NO COMPROMISES - that's the spirit of the MAX series. The MAX amplifiers are made for the enthusiasts out there who crave crazy amounts of power! We've packed these powerful amplifiers with a bunch of interesting features. We know you're itching to start building your new sound system, but make sure to read through these pages - so you can get the most out of your drivers!

With the MAX A1 series we've created a diverse range of high-performing amplifiers that will both impress and astonish, no matter the setup. This also means that not all of the models will have all of the features presented in this chapter, and placement might differ.

HIGH LEVEL INPUT

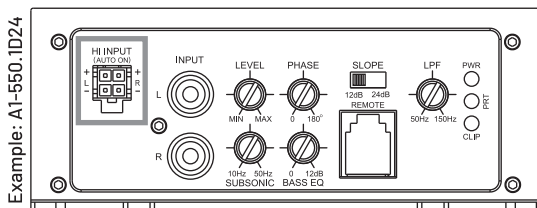


HI INPUT. Used instead of low level input/RCA to connect speaker output directly to the head unit.




Never use high level and low level input at the same time!

LOW LEVEL INPUT

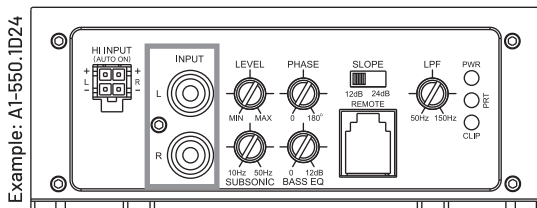

INPUT Left - Right. Connects to your head unit's RCA outputs.

LEVEL (GAIN)

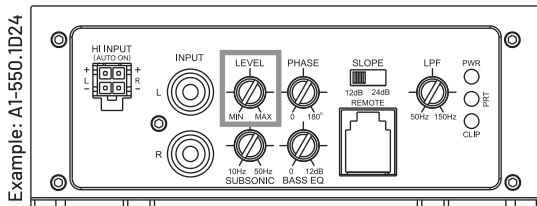


LEVEL. Sync your head unit's output signal with the amplifier.



Follow the HOW TO instructions

FUNCTIONS

PHASE

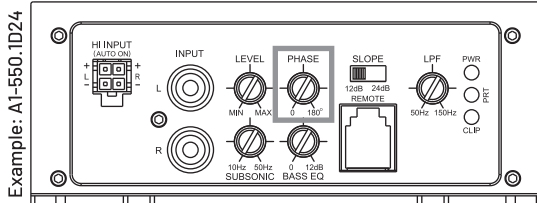


PHASE 0°-180° variable. Adjust and optimize the bass for best possible sound.



Follow the HOW TO instructions

SUBSONIC FILTER

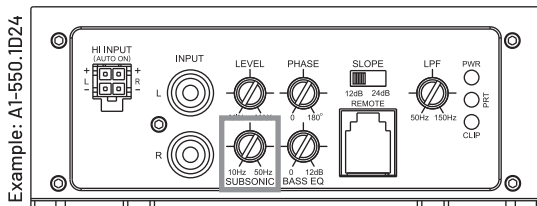


SUBSONIC. Reduce the lowest frequencies to improve the subwoofer performance.



Follow the HOW TO instructions

BASS EQ

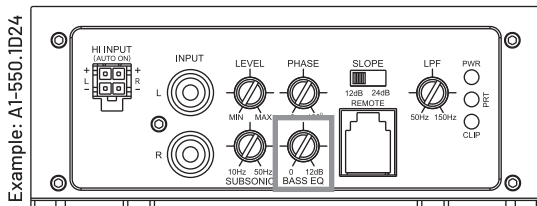


BASS EQ. Boosts the bass at 45Hz, Variable between 0-12dB.



Follow the HOW TO instructions

SLOPE

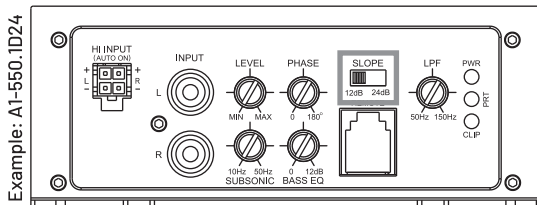


SLOPE. Choose how steep the crossover frequency should be cut. Select between 12 dB or 24 dB slopes.



Follow the HOW TO instructions


FUNCTIONS

BASS REMOTE

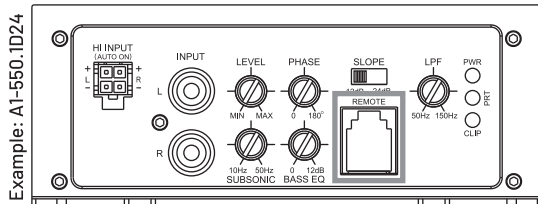

REMOTE. Use this to connect a remote level output control knob for an easy access and adjustment of the amplifier's output.

LOW PASS FILTER

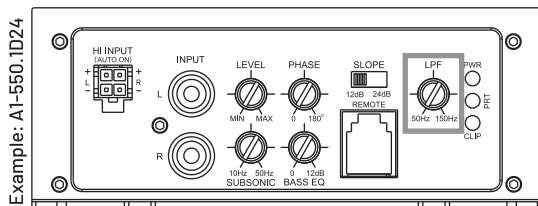


LPF. Limits the output above selected frequency.




Follow the HOW TO instructions

POWER INDICATOR

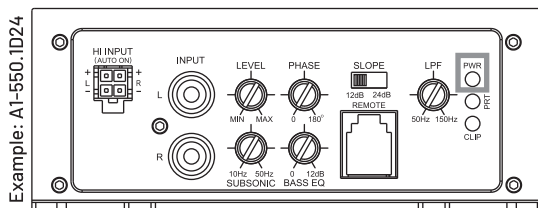

POWER. Illuminates when the amplifier is connected and on.

PROTECT INDICATOR

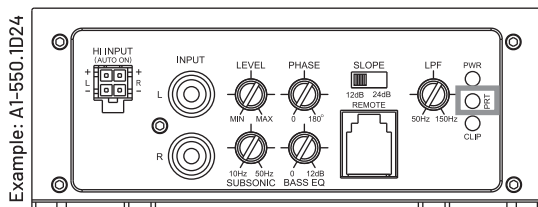


PROTECT. Illuminates when the amplifier indicates a failure.



If protect glows, read TROUBLE SHOOTING.

FUNCTIONS

CLIP INDICATOR

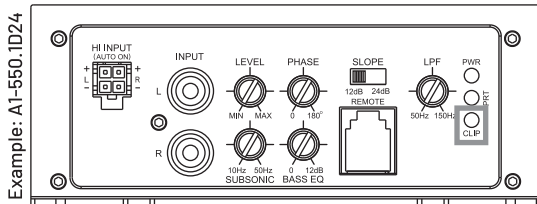


CLIP. When distortion exceeds 1%, the CLIP indicator glows yellow.



If it glows static, read HOW TO instructions.

SPEAKER OUTPUTS

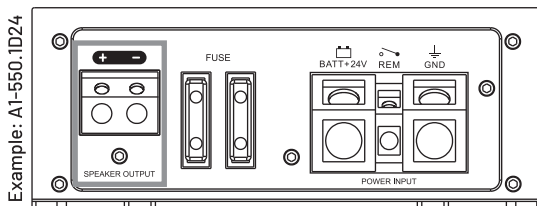


SPEAKER OUTPUT. Connect subwoofer/subwoofers to the amplifier.



Connect positive & negative output to equivalent connector on the subwoofer(s).

FUSES

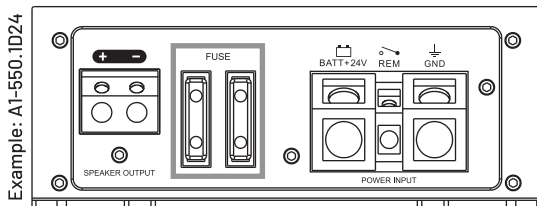


FUSE. Protects your amplifier from major damage in case of a power failure.



Which fuse type the amplifier uses is in the SPECIFICATION.

POWER

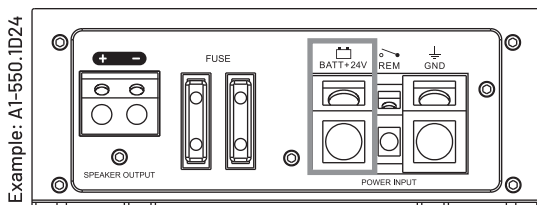


BATT +24V. Terminal input connection for +24V cable (+ power cable).



Make sure the vehicle use a 20-32V power source and electrical system.


FUNCTIONS

REMOTE

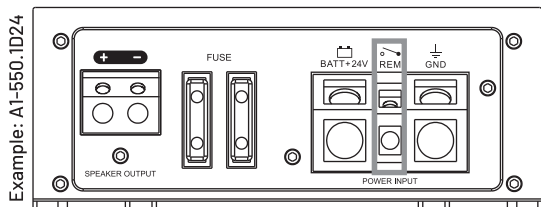

REM. Terminal input connector for the unit that controls the turn-on signal.

GROUND

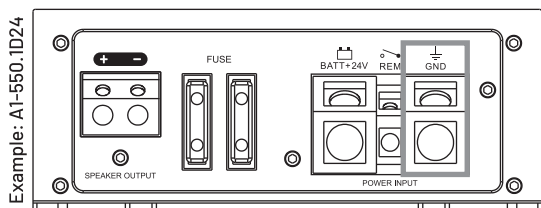

GND. Terminal input connector for ground cable (- power cable).



The GND cable must be in direct contact to the vehicle chassis or the power source's neg. (-) binding post.

HOW TO

A well-built sound system will set you aside from the rest and elevate your vehicle! It's important that you carefully read the instructions on the following pages. This is to make sure that you install and use the amplifier correctly, for the true MAX EXPERIENCE!

INSTALL AMPLIFIER




Make sure your vehicle is up to task. You need a 24VDC negative ground electric system and the power source and the alternator should be fully functional and healthy.



Better safe than sorry! Find a location that has a normal temperature and is safe from rain, excessive moisture and dirt when you're going to install your amplifier.

Disconnect and secure the negative terminal from your power source to eliminate the risk of damaging yourself or the products. Place the negative terminal in a secure position so that it won't accidentally contact the positive or the negative power source post.

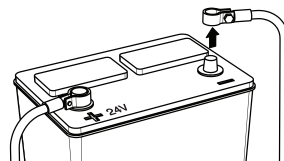

Have all the necessary tools ready and close at hand. Make sure that the needed wiring accessories are prepared. Your wiring kit should be of the recommended size depending on the specific amplifier. See the SPECIFICATION chapter, or use this table to find your minimum recommended size for **power cables**:

POWER CABLE	0-1m	1-2m	2-3m	3-4m	4-5m	5-6m	6-7m	7-8m
225-300 AMP								
150-225 AMP								
125-150 AMP								
105-125 AMP								
85-105 AMP								
65-85 AMP								
50-65 AMP								
35-50 AMP								
20-35 AMP								
0-20 AMP								

Cable size:

A.W.G: 10 Gauge
MM²: 6mm²

A.W.G: 8 Gauge
MM²: 10mm²

A.W.G: 4 Gauge
MM²: 20mm²

A.W.G: 2 Gauge
MM²: 35mm²


A.W.G: 0 Gauge
MM²: 50mm²

HOW TO

It's time to find the perfect location to place your amplifier! Since the amplifier produces heat you don't want to install it where it might get overheated. Find a place where air can circulate around it to stay cool. Also leave enough space so it's easy to connect your cables and reach for the controls. Don't bolt the amplifier to your vehicle chassis (if this is your only option, you need to isolate the amplifier from the screws).


Find the best way to run the cables through your vehicle! This might take some time, and may vary between different models. Preferably the cables shouldn't be visible when you're finished and they shouldn't be placed in a way that they obstruct any of the vehicle's functions or hinder you from operating the vehicle safely. It's also important you don't run the power cable together with the signal cable, since this can cause interference.

Grounding is ESSENTIAL! The ground cable must be in direct connection with the vehicle's metal frame. So take your time finding the perfect bolt or area for this. There should be no paint or dirt preventing a clean connection, so scrape down the area where the ring terminal touches/is in contact with the frame.

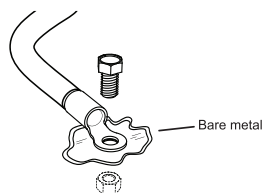

Connect the power cable to the positive power source terminal, preferably together with the vehicle +24V cable. The placement of the 24V battery varies depending on the vehicle. A fuse holder needs to be placed on the cable at a 15-25 cm distance from the terminal and before any steel parts. **WARNING!** Install the fuses as the absolute final step when the rest of the installation is complete.


The next step is to *run a remote wire from your head unit to the amplifier*, preferably together with the power cable (see illustration below). Use a separate 14-18 AWG wire for the remote signal. You also need a *high quality RCA signal cable*. To make sure there's no interference, the RCA cable should be run as far away from the power cables as possible, preferably on the opposite side of the vehicle (see illustration below).

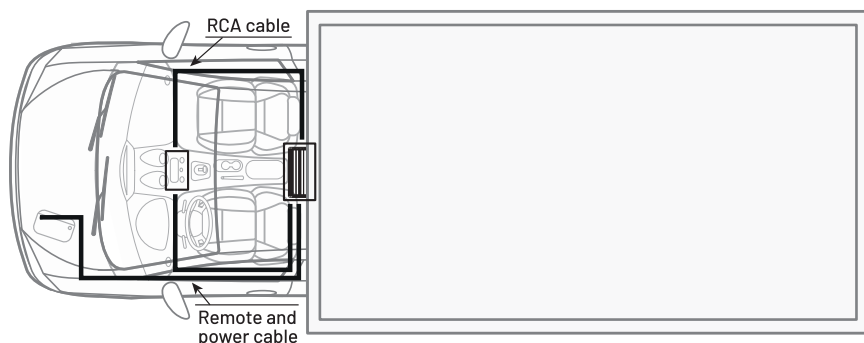


HOW TO

If you don't have any RCA outputs on your head unit you can use the high level input function.

Use the included HI input cable. This will connect the speaker output of the head unit directly to the amplifier. When you use the high level input the amplifier will turn on automatically when the head unit starts. This means you don't need to connect the REM (remote cable) to the amplifier.

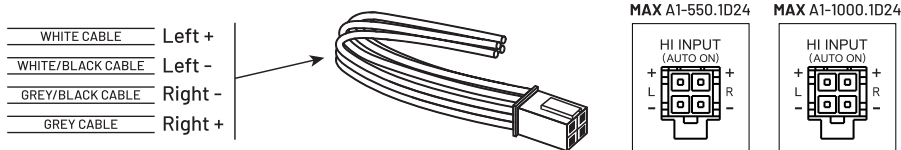

Use the right speaker cable for the job! Make sure to use the recommended size, and follow the polarity of the speaker wire from the speaker to the amplifier.

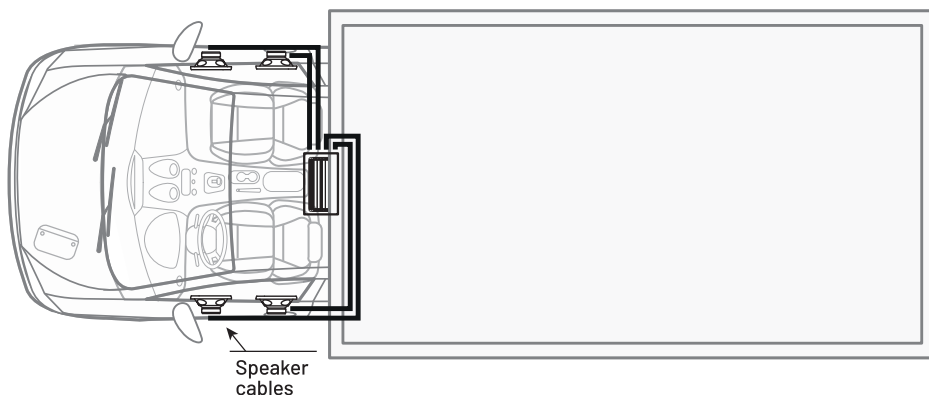

See the SPECIFICATION chapter for recommended cable sizes. You can also look through the table on the following page to find your minimum recommended size for **speaker cables**.

HOW TO

SPEAKER CABLE	0-1m	1-2m	2-3m	3-4m	4-5m	5-6m	6-7m	7-8m
3000 W								
2500 W								
2000 W								
1500 W								
1200 W								
900 W								
600 W								
450 W								
300 W								
150 W								
100 W								
50 W								

Cable size:  A.W.G: 16 Gauge
MM²: 1,5mm²




 A.W.G: 14 Gauge
MM²: 2,5mm²

 A.W.G: 12 Gauge
MM²: 4mm²

We're almost there! Are you ready? When all cables have been installed and secured with grommets, cable end-sleeves, cable ties, terminals and wire looms, you're ready to connect the cables to the amplifier.




Follow the instructions on your amplifier and/or in the manual to make sure that each cable is connected to the correct output and input. **WARNING!** Make sure that any Bass EQ function is set to a minimum, that the level/gain is set to a minimum and all crossovers are turned off/set to default.

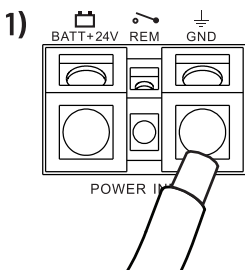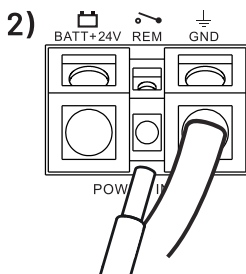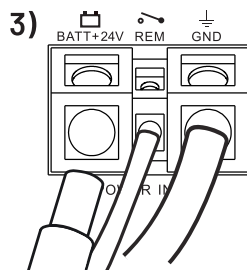

Remember that if you're using the high level input connection, you don't need to connect the REM (remote) cable to the amplifier.

HOW TO

Install the fuses in the fuse holder and reconnect the negative power source terminal. Be prepared to disarm your vehicle's alarm and to enter your radio/source unit code.

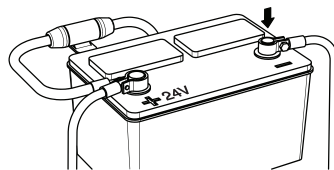

Time to test it out! Turn the ignition on your vehicle and turn the source/head unit on. Make sure that the amplifier's power indicator is on and shows that there's power coming all the way through, if not – turn the head unit off, the ignition off, disconnect the negative power source terminal and re-check all your connections.

One last thing... We know you are ready to show off your upgraded sound system to the world, but before you reattach all panels and put the head unit back in place, do a final check. Make sure that all the speakers have a signal by playing some really good music, turning the head unit volume up just a bit, and just slightly turning the level/gain on the amplifier. **WARNING!** Do not turn the level/gain more than to just hear the music (read through the HOW TO-section on setting the level/gain before further use).

HOW TO

CONNECT SPEAKERS


Make sure you got everything you need when connecting your subwoofers/speakers to your sound system's new powerhouse. Depending on what amplifier you have, and what type of speaker you want to connect, there are a few different ways to make the right connections.




NOTE! The minimum total impedance varies between models, see the information below. Make sure to have the correct load on your amplifier, going below specified impedance will damage your amplifier. Usually you can find the speaker's impedance in their manual.

MONO AMPLIFIER

Single woofer (total impedance minimum 1 or 2 Ohm):

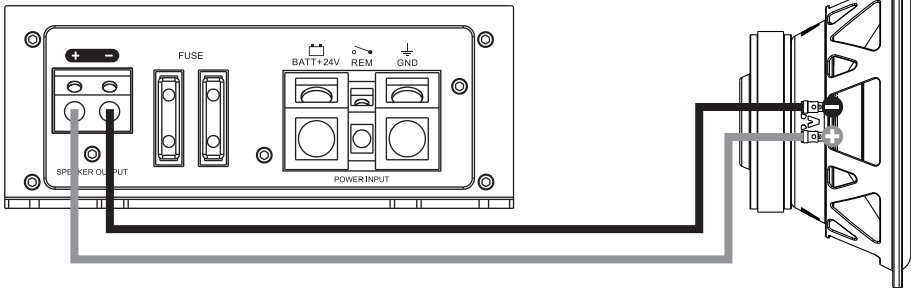

Dual woofers (total impedance minimum 1 or 2 Ohm):

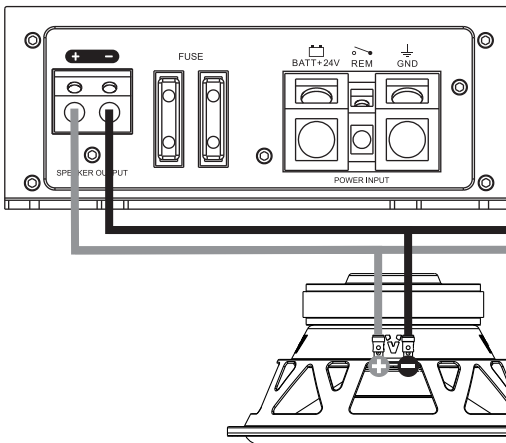

**Minimum total impedance
for the GAS MAX A1 models:**


- GAS MAX A1-550.1D24 = 2 Ohm
- GAS MAX A1-1000.1D24 = 1 Ohm

HOW TO

TWEAKING & SETTINGS

The devil is in the details. Tweak the settings on your MAX amplifier using the following recommendations and cross the line that separates the average user from the hardcore high-power audio junkie!

LEVEL (GAIN)

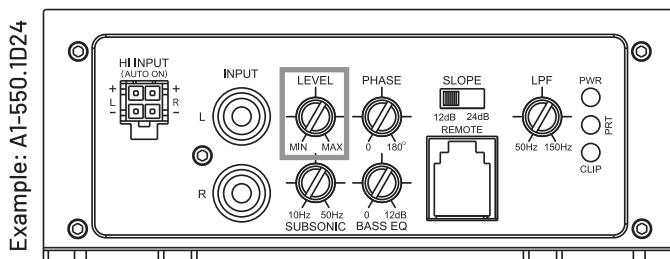

Remember that the level/gain setting is not a volume control! It's there to let you sync your head unit's output signal with the amplifier.

Every sound system is different, and there are several ways to set the amplifier level/gain. To get started you can use your own senses and audio skills by following the instructions below. On the following page we also tell you how to set the level/gain with an oscilloscope.

Use your own senses and audio skills

If you are planning to set the level/gain by hand, do so in a quiet environment. The more experience you have in making this sort of settings, the easier it is to get a good result. If you haven't done this before, a tip is to ask a friend to help you out.

- Set the level/gain to minimum.
- Make sure that your Bass EQ and other EQs are set to Zero/minimum (if available).
- Set the volume on your head unit to 75%.
- Start to play your favourite track that you are really familiar with and knows the sound of by heart, or use the test tones on a sine-wave test CD or digital test track.
- Slowly start to increase the level/gain.
- When you see the clip LED indicator turn on and start flickering you will hear that the sound starts to change and you can note distortion. Stop the level/gain adjustment and turn the level/gain down slightly until the clip LED turns off.
- You have now set the level/gain on your amplifier correctly.

HOW TO



Use an oscilloscope for high precision results

When you are setting the level/gain on your amplifier with an oscilloscope you are measuring the output power of the amplifier. **WARNING!** Make sure that the positive speaker cable is removed from the amplifier.

Set the level/gain to minimum. Start a CD/digital sine-wave test track with your head unit's volume level at 75% and set the oscilloscope to AC Volts.

Connect the test probes on the amplifier's speaker terminals. When you're connected, you will see soundwaves on the oscilloscope. The soundwaves should be moving in a steady pattern with smooth tops and bottoms.

While observing the oscilloscope, start to slowly increase the level/gain until you start to see irregularities in the soundwaves. When the waveform is starting to look squared, turn down the level/gain until the waveform is back to smooth curves (see the graphics below).

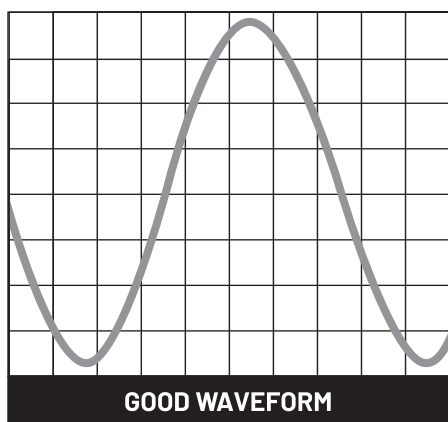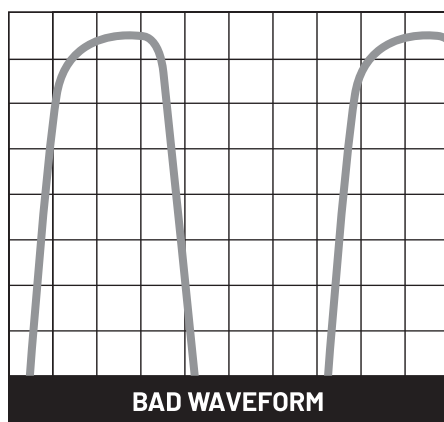


Remember – if you use your BASS EQ or any other sort of amplitude enhancement functions after setting the level/gain, you will have to do it all over again!

HOW TO

BASS REMOTE

With the MAX A1-550.1D24 / A1-1000.1D24 amplifier, we have included an awesome bass remote. The included bass remote control makes it possible for you to fine tune the level of bass from the front seat while listening to your favorite song.

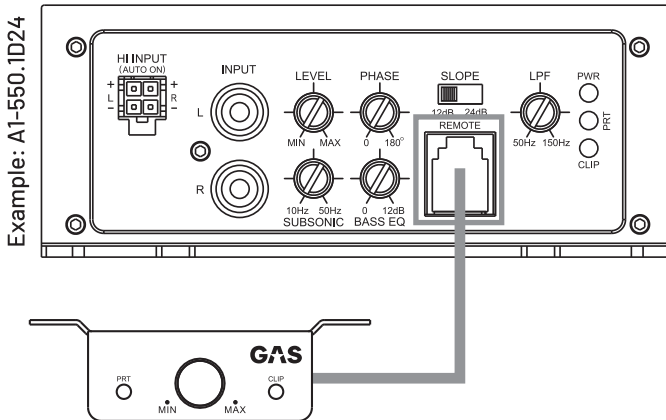

The max level will be determined by how the level/gain knob was set on the amplifier in the previous stage. It's therefore very important to set level/gain control at the correct level without the LED clip glowing yellow or start flickering. You can also turn it all the way down to minimum if you want to reduce the level of bass output to minimum.

When you are setting the level/gain on your amplifier, make sure that the bass remote knob is positioned on MAX. This bass remote can't increase the level above the maximum level/gain setting on the amplifier. It's a useful tool to lower the gain and/or turn it back up to fine tune your listening experience.



Always make sure that your full concentration is on the road while you drive. Do not make detailed adjustments on the bass remote's setting while driving.

HOW TO

CROSSOVER

The filter functions are used to regulate the maximum and minimum frequencies each speaker is allowed to reproduce. The first thing you need to do is to find out the frequency response of each subwoofer you wish to connect to the amplifier. Don't allow the filters to pass through lower- or higher frequencies than your subwoofers can handle.

The different frequency bands reproduce different types of sound:

HZ	20-40	40-80	80-160	160-320	320-640	640-1280	1280-2560	2560-5120	5120-10200	10200-20400
Band Type	Low bass	Mid bass	Upper bass	Lower midrange	Middle midrange	Upper midrange	Lower treble	Middle treble	Upper treble	Top octave

SUBSONIC: The subsonic filter is a highpass crossover that let higher frequencies pass above the set frequency. If you set the frequency at 35Hz, frequencies below will be attenuated by 12/24db per octave. That means that the level of the subwoofer will be 12/24dB lower at 17Hz compared to 35Hz.

Low-Pass Filter (LPF): The low pass filter will let the lowest tones pass to your connected subwoofer and attenuate frequencies with 12/24db per octave above the set crossover frequency. If you turn the LPF knob to 80Hz the subwoofer's level will be 12/24dB lower at 160Hz.

The MAX A1 mono amplifiers are designed to offer you precise adjustment options so your subwoofers will be able to perform to their fullest. The built-in filter settings (SUBSONIC and LPF) need to be set correctly depending on what type of setup you are going to apply. Below you'll find the most common setting for these filters when connecting the amplifier to subwoofers. If you want more help/guidance in how to use the filter settings, consult your local GAS AUDIO POWER dealer.

SUBWOOFER:

SUBSONIC




LPF



Set the SUBSONIC dial to 10Hz and the LPF dial to 80Hz as a starting point. The main goal is to find a cut off frequency that will blend in perfectly with the front and rear speakers. Take your time to find the optimal sweet spot for your sound system so you get the true MAX EXPERIENCE!


HOW TO

SUBSONIC

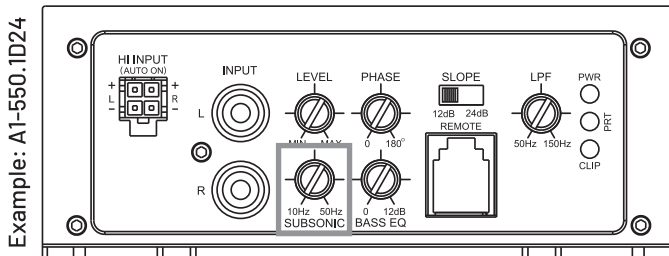

The **SUBSONIC** filter is adjustable between 10Hz - 50Hz. For smaller subwoofers, a higher setting between 30Hz to 50Hz is recommended to protect the subwoofer from playing frequencies it cannot reproduce efficiently.


LOW PASS FILTER

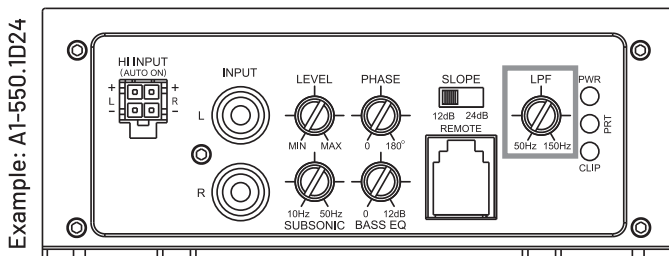

The **LOW PASS CROSSOVER (LPF)** is adjustable between 50Hz - 150Hz. Adjust the crossover frequency for maximum subwoofer performance and smooth blending with the rest of the speakers in your system.


HOW TO

PHASE

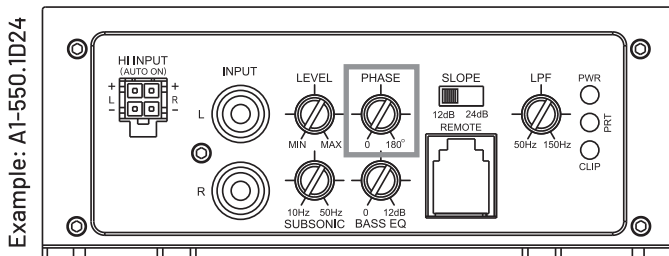

Adjust the subwoofer phase between 0° - 180° to achieve the best possible blend with your front speakers. Turn the dial until the bass sounds full, balanced, and perfectly integrated with the rest of the speakers in your system.

SLOPE

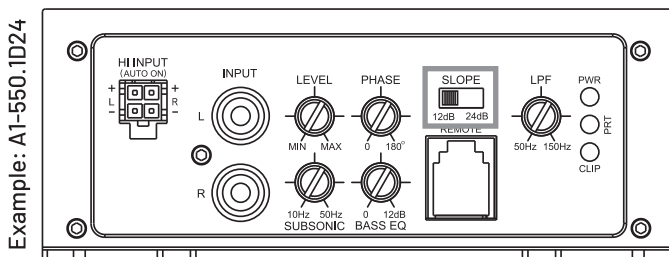


Select between 12dB or 24dB slopes per octave. This controls how steeply the crossover frequency is cut.

When 12 dB is selected, the signal level is attenuated by 12dB one octave above the selected low-pass crossover frequency.

When 24 dB is selected, the signal level is attenuated by 24dB one octave above the selected low-pass crossover frequency.

HOW TO

BASS EQ

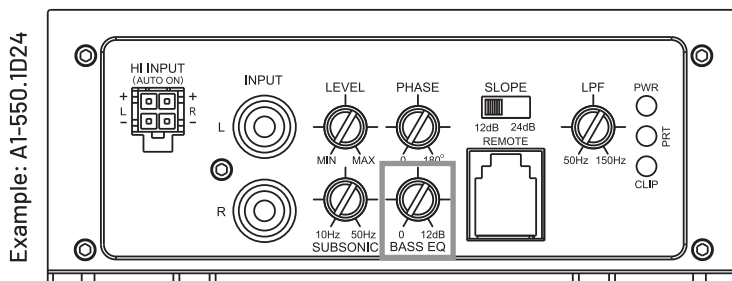

If everything is tuned correctly and the level/gain has been set, the BASS EQ should remain in default (0dB). This function will apply level/gain at 45Hz centre frequency. Be advised that equing the bass from 0-12 dB is a lot, an increase of +3dB doubles the output! If used incorrectly, this can permanently damage your subwoofer.

WARNING! The information below is for experienced users and bass addicts only, if you are new to the wonderful world of low frequencies, leave the BASS EQ in default setting or consult with your local GAS AUDIO POWER dealer.

If you use the BASS EQ, make sure the volume on the unit is not turned all the way up to MAX. Turn down the volume on your head unit to a moderate listening level before you start adjusting it. Start a music track and very carefully turn the dB dial up until you start hearing distortion.



Incorrect usage of the BASS EQ can permanently damage your speakers/subwoofers.

TROUBLESHOOTING

NO POWER

Use a multimeter to measure the voltage on the +24V terminal and the remote signal terminal. Use a multimeter to make sure that you have a negative ground connection. Check the built-in fuse (if there's one) on the amplifier. If there's no power coming through – Control the power cable's fuse, if it is intact – make a full check of the wiring to ensure cable integrity. When all of the above has been tested/looked over, and all is as it should be but there's still no power coming through to the amplifier, consult your local GAS AUDIO POWER dealer.

NO SOUND

Check your head unit to make sure no settings are limiting the amplifier functions. Check all signal cables. Check all speaker cables. Check all speakers. When all of the above has been tested/looked over, and all is as it should be but there's still no sound, consult your local GAS AUDIO POWER dealer.

UNWANTED NOISE

Check your negative grounding point and make sure that the surface is clean (consult the HOW TO instructions). Make sure that your signal cables or speaker cables are not too close to the power cables. Look over your wiring to see if there's any damage or connection issue.

DISTORTION

Check the speaker cables to make sure that the polarity isn't reversed on one channel. Check the settings on the amplifier, make sure that the level/gain is set according to the instructions. Check subwoofers.

PROTECTION

Check all speakers and make sure that no leads or voice coils are damaged. Make sure all connections are made as they should be and that no leads touch the amplifier chassis.

The amplifier will go into protection if it's overheated. As soon as the normal operating temperature is back it will automatically turn back on. To prevent the amplifier from overheating, make sure to follow the HOW TO installation instructions and leave enough space around the amplifier so that the airflow is optimized.

The protection mode is activated if the impedance load's lower than the amplifier limitations. If the input voltage is lower or higher than the amplifier limited range the amplifier will go into protection. When all of the above has been tested/looked over, and all is as it should be but the amplifier is still in protection mode, consult your local GAS AUDIO POWER dealer.

WARRANTY & DISPOSAL

Our products are made with passion and experience to give you the products you need to have an awesome audio powered experience with NO COMPROMISE. All our products are covered by warranty, depending on the conditions in the country where it's sold. The warranty is valid from the date of the original receipt as proof of purchase (warranty period differs depending on local warranty laws and policies).

If the amplifier is returned for service, please include the original dated receipt (or a copy) with the product. Make sure that the amplifier is packaged properly and secured, preferably in its original packaging. If you have any questions regarding the terms of warranty, please contact your local GAS AUDIO POWER dealer/distributor.



The crossed-out wheeled bin symbol means that the product, literature and packaging included must be taken to separate collection at the end of their working life. Don't dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority.



This product has been granted with the CE certification mark to show that the product follows the health, safety, and environmental protection standards for products sold within the European Economic Area (EEA).



GAS Audio Power products comply with the relevant provisions of the RoHS Directive for the European Union. In common with all Electrical and Electronic Equipment (EEE) the product shouldn't be disposed of as household waste. Alternative arrangements may apply in other jurisdictions.



GAS Audio Power is a global partner of the European Mobile Media Association, an organization that focus on promoting the custom made mobile media installations to consumers.

EXPLORE

Like what you see but curious for more? The GAS world is large and we have loads of different products to show you and take your audio passion to a whole new level! You can see all of our products on our website www.gasaudiopower.com.



SCAN WITH PHONE

MAX SERIES AMPLIFIERS

Never leave your speakers and subwoofers wanting more. Perform to the MAX and give your system loads of controlled power to get the experience you deserve. With MAX amplifiers you will cross the line that separates the average user from the hardcore high-power audio junkie, and you will never want to go back.

MAX A1 SERIES	
MAX A1-90.4D	4x90W RMS FOUR CHANNEL AMPLIFIER
MAX A1-90.4D24	4x90W RMS FOUR CHANNEL AMPLIFIER (24V)
MAX A1-150.2D	2x150W RMS TWO CHANNEL AMPLIFIER
MAX A1-550.1D	1x550W RMS ONE CHANNEL AMPLIFIER
MAX A1-550.1D24	1x550W RMS ONE CHANNEL AMPLIFIER (24V)
MAX A1-1000.1D	1x1000W RMS ONE CHANNEL AMPLIFIER
MAX A1-1000.1D24	1x1000W RMS ONE CHANNEL AMPLIFIER (24V)

THE GAS WORLD

You've entered the world of GAS. We aim to please, and we've made sure to have products made for you. No matter what stage of the LOUD-addiction you might find yourself in, there is a GAS product to fill your need.

MAD

Just starting out? The MAD series is made to play LOUD and to be the express lane to a no bullsh!t sound system that will make sure everyone can hear you coming!

MAX

The MAX series holds products made to deserve the center stage. Powerful, heavy duty and designed to be noticed. We made NO COMPROMISES because we know that you wouldn't accept it.

CMP

The CMP series has been developed for the crucial seconds when the dB-counter starts to tick. All CMP products have hand-picked, high quality, COMPETITION GRADE components and they are specially designed to withstand an awesome amount of power.



THANKS FOR JOINING GAS AUDIO POWER!



GAS

AUDIO POWER

GAS AUDIO POWER and SHAKY are registered trademarks by Winn Scandinavia AB and is protected by relevant laws and jurisdictions such as Copyright and Trademark laws.

Winn Scandinavia AB | Idrottsvägen 37, 70232 Örebro, Sweden | www.winnscandinavia.com

Winn Scandinavia AB reserves for possible typos, factual or numeric errors that may have been printed on any products, package designs, user manuals and/or other included accessories.

GAS
AUDIO POWER