


Installation Guide

Part No: **CT23BM04**

BMW 3 Series E90
Vehicles with Automatic A/C



1. Remove the climate control panel using a panel removal tool. Disconnect all cables.

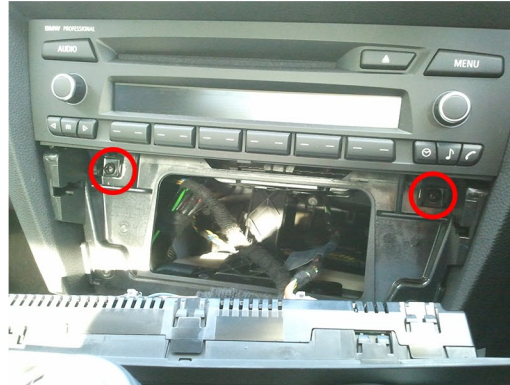

2. Unscrew the two screws holding the OEM radio in place. Slide the radio forward and disconnect.



3. Unscrew the plastic sub-dash cage and remove from the dash.



5. Remove the climate control panel from the OEM climate control bezel. Insert this into the panel supplied in the CT23BM04 kit.

6. Screw the supplied metal brackets to the side of the aftermarket head unit. The mounting depth can be adjusted accordingly via the mounting holes.



7. Make all wiring connections to the aftermarket head unit. Mount the head unit into the dash and screw into place at positions highlighted in red.



8. Clip the supplied fascia and climate control assembly into place over the top of the aftermarket head unit..