

7. Insert the head unit into the dash, lining the screw holes up with the holes in the brackets in (6). Screw into place using the four screws supplied. Insert the air vents and silver trim into the supplied facia planel. Clip the facia over the head unit and secure into place



8. Installation is now complete.

## **Double Din Facia Kit**



**Application:** VW Golf 7 2013>


Part Numbers: CT23VW10 (RHD) CT23VW10L (LHD)



Double DIN Kit content

Facia Plate Mounting Brackets + Screws Plastic lids

Note the maximum mounting depth for this facia kit is 160mm

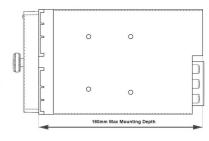



 Picture showing the OEM head unit



 Cut and remove the plastic 'bridge' section as indicated by the white dotted lines.



2. Carefully unclip the OEM trim panel from around the head unit. Remove the air vents and the silver frame.



5. The plastic 'bridge' section removed.



3. Remove the OEM head unit using Becker keys.



6. Take the left and right hand brackets and place them as shown. Mount the other two brackets supplied, to the aftermarket head unit using the screws supplied.

Connect all cables to the aftermarket head unit and confirm correct function of the head unit. (Note that the Connects2 interface, CTUVW02 is required)