

## ...connecting to the aftermarket


### Kit Includes:

- 1: Fascia trim x1
- 2: Pair of brackets x1
- 3: Blank relocation buttons (Left, Middle, Right) x3
- 4: Reloction panel x1
- 5: Reloction lead x1
- 6: Screws x4


# Installation Manual: Mercedes C Class W204 2007>

# CT23MB15

1. Mount the brackets (E) to both sides of the Pioneer head unit.

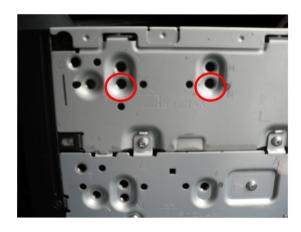

The holes in which the bracket should be screwed are circled

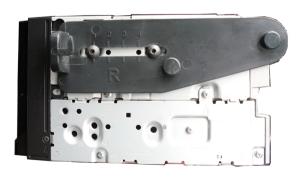



Right

Left



...connecting to the aftermarket





Remove airvents and disconnect the two Blue connectors from underneath vents.







Guide the head unit from the dash. There are runners as shown bellow.






...connecting to the aftermarket



Detatch the clips as shown above on bellow



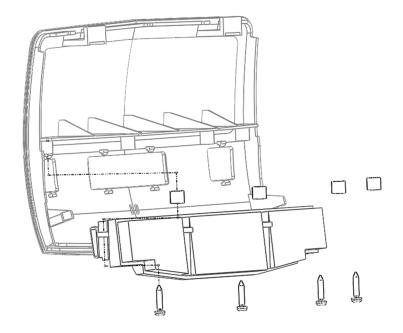

Disasenble buttons to relocation pannel



...connecting to the aftermarket



Cronser

Cronser

Or Mono Acc Cro

Ensure all wires are clear of the aperture. Slide the head unit back into the dash. Ensure that the guide knobs are lined up with the guide rails as shown.

Using lead 382 to extend OEM wiring from buttons to new loction



Install the screw base by locating the screws from the display removal.



...connecting to the aftermarket

1



Reconnect the two Blue connectors to the airvent panel

2



Slide airvent panel back into the place.

3



Install New Relocation Panel . The panel is very tight to clip in place, you will need to clip the top hooks first then lower clips.